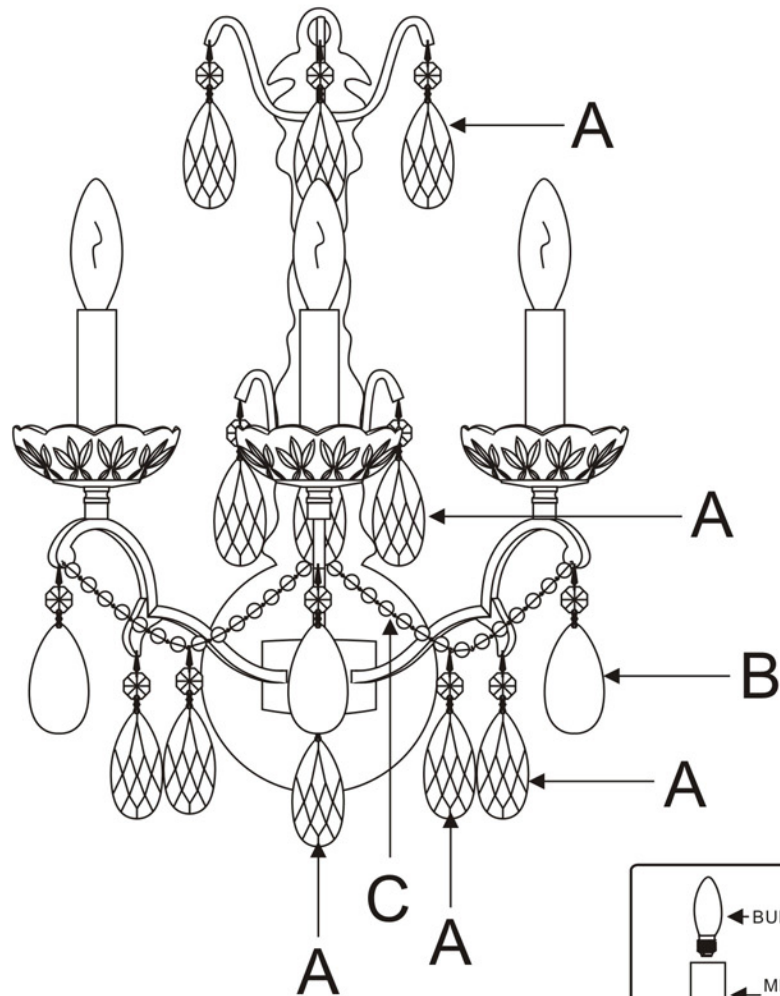

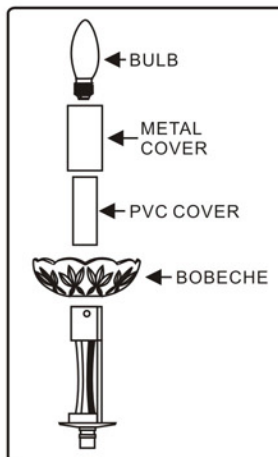


# MODEL#:32460/3 ASSEMBLY AND DRESSING INSTRUCTIONS



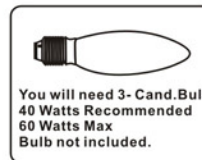
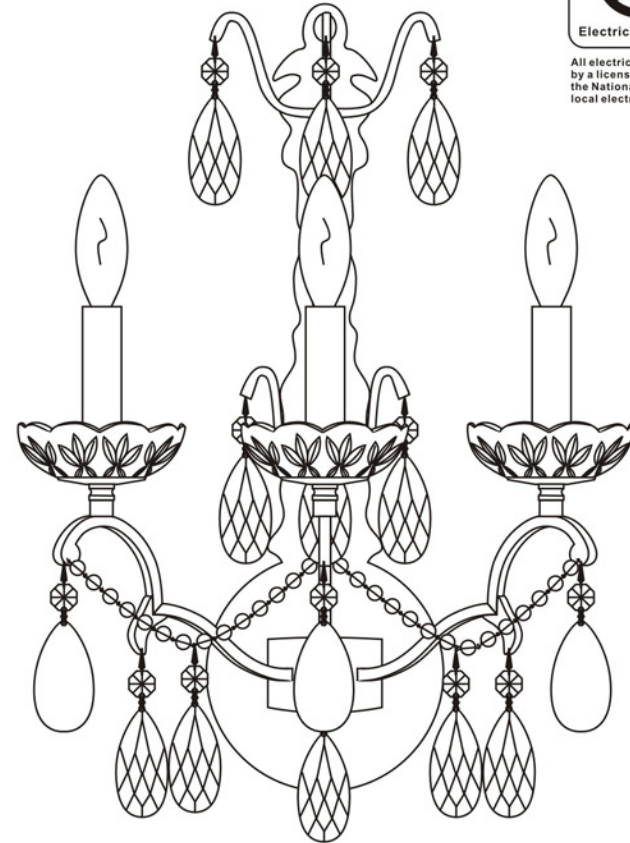
- A=  (14mm+63mm)\*11sets  
 B=  (14mm+ 63mm)\*3sets  
 C=  (8mm x 14 pcs)\*2sets



# ITEM NUMBER:# 32460/3 INSTRUCTIONS



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



TI-32460/3 - 2008/1/7

